KitchenAid®

COOKTOP PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

30" Free-Standing
DESIGNER STYLE
Convection Oven

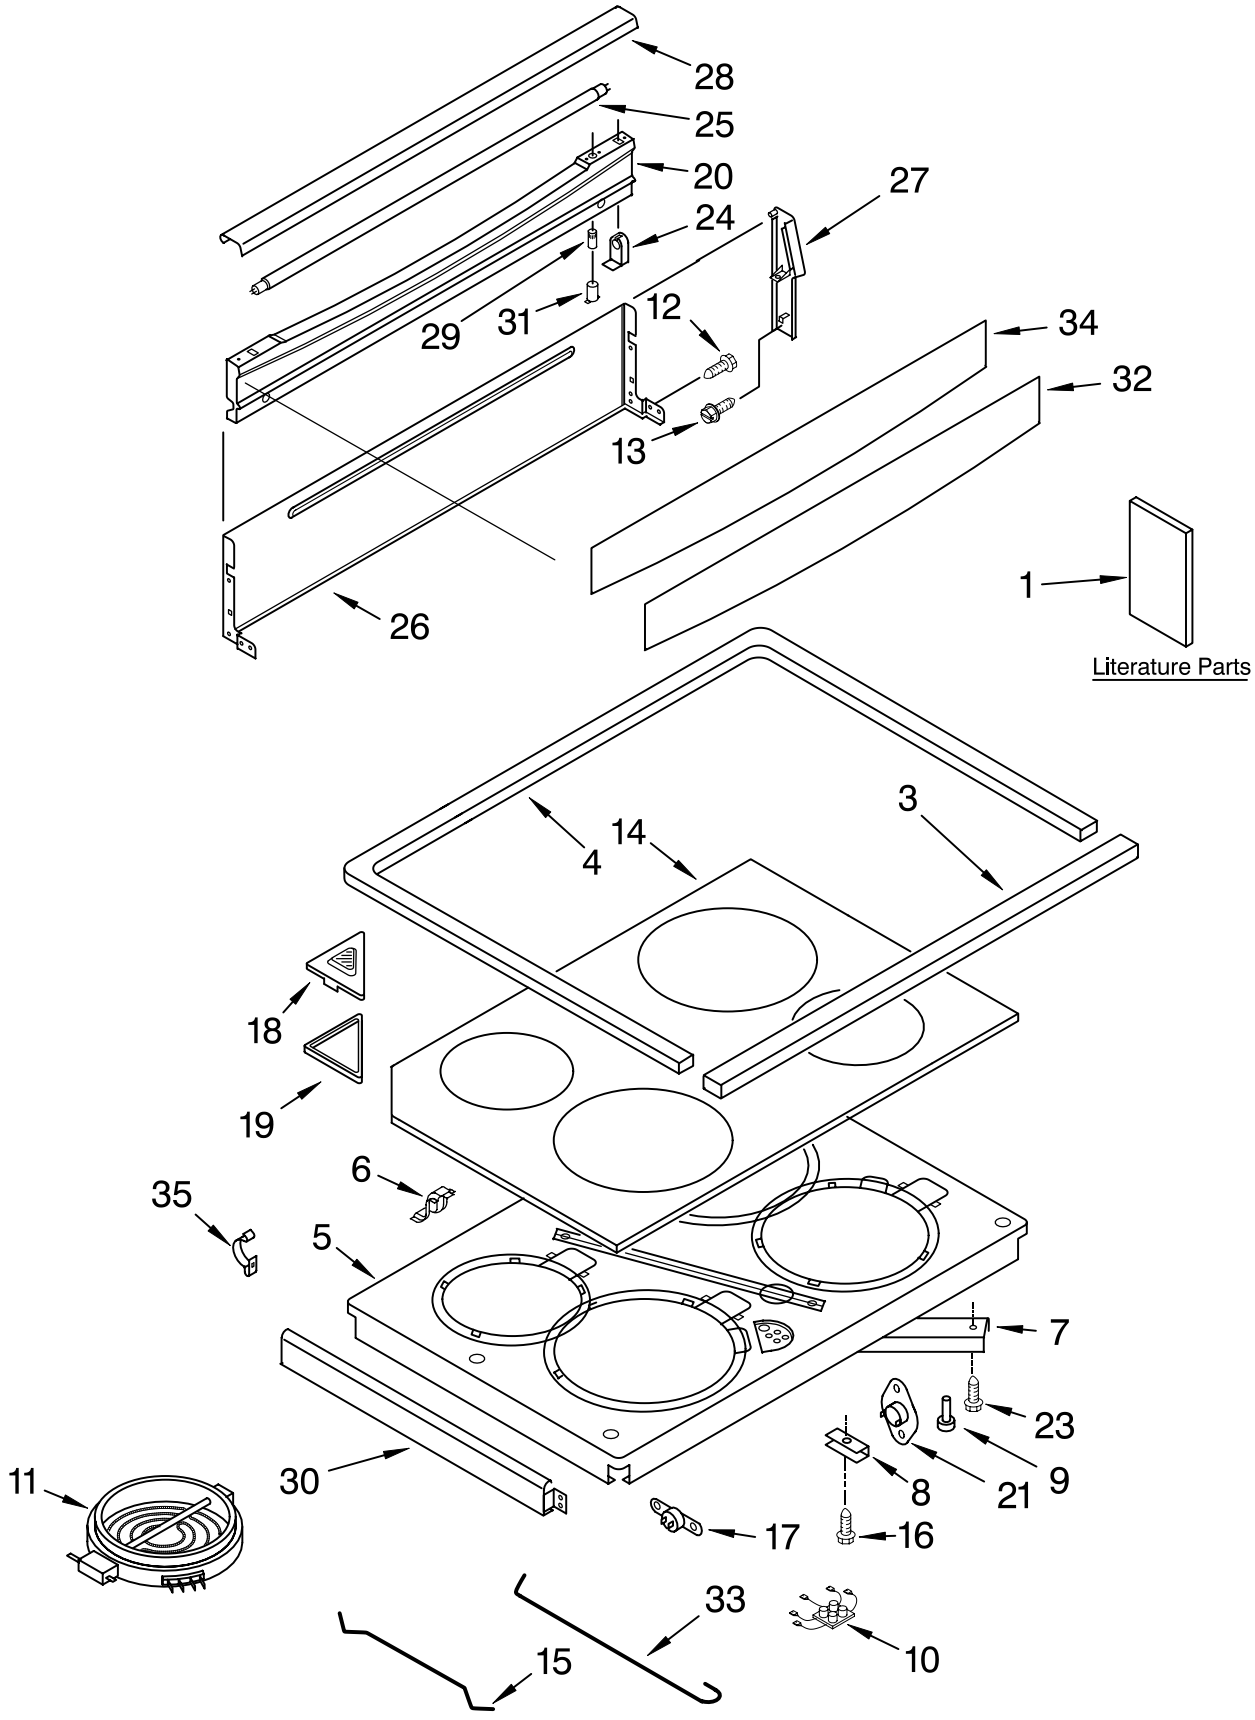

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

COOKTOP PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9752043	Installation Instructions
	LIT9753846	Use & Care Guide
	LIT4449066	Cookbook T/C Ovens
	LIT9753027	Tech Sheet
	LIT9753028	Wiring Diagram
	LIT9752686	Smart & Easy Guide
	LIT9752775	Template, Anti-Tip
	LIT3191638	Safer Cooking Tips
3	9751478	Gasket, Console
4	9781614	Gasket, Cooktop
5	9752892	Support, Element
6	9751629	Bracket, Pivot
7	9781553	Brace, Support
8	9753691	Clip, Support (4)
9	9750969	Bumper, Rubber (4)
10	9781936	Hot Light
11		Element, Surface
	8272564	1500W - LR
	8272566	1800W - RF
	9753997	2200W - RR
	8272563	1000/2400W - LF
12	3149333	Screw
13	9780265	Screw
14		Cooktop, Ceran
	9753711CW	White
	9753711CB	Black
	9753711CC	Biscuit
15	9781459	Rod, Large Ceran Element
16	9751871	Screw
17	341196	Thermo Disc
	9780265	Screw(4)
18	9751800	Cover, Vent
19	9751841	Gasket, Vent Cover
20		Backsplash
	9781896GW	White
	9781896GB	Black
	9781896GC	Biscuit
21	9751984	Bimetal
23	9780272	Screw
24	9752760	Receptacle, Light
25	422581	Lamp. Flourescent
26	9751664	Cover, Backsplash
27		Endcap, Backsplash (Right Hand)
	9781885FW	White
	9781885FB	Black
	9781885FC	Biscuit
		(Left Hand)
	9781884FW	White
	9781884FB	Black
	9781884FC	Biscuit
28		Cover, Light
	9751327	White
	9751632	Black
	9753320	Biscuit
29	9781118	Starter
30		Trim, Cooktop (Right Hand)
	9751275PW	White
	9751275PB	Black
	9751275PC	Biscuit
		(Left Hand)
	9751276PW	White
	9751276PB	Black
	9751276PC	Biscuit
31	9750866	Holder, Starter
32		Glass, Backsplash
	9781154	White
	9753292	Clear
33	9781460	Rod, Small Ceran Element
34	9753291	Panel, Backguard (Stainless)
35	98997	Clip, Wire

DOOR AND DRAWER PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

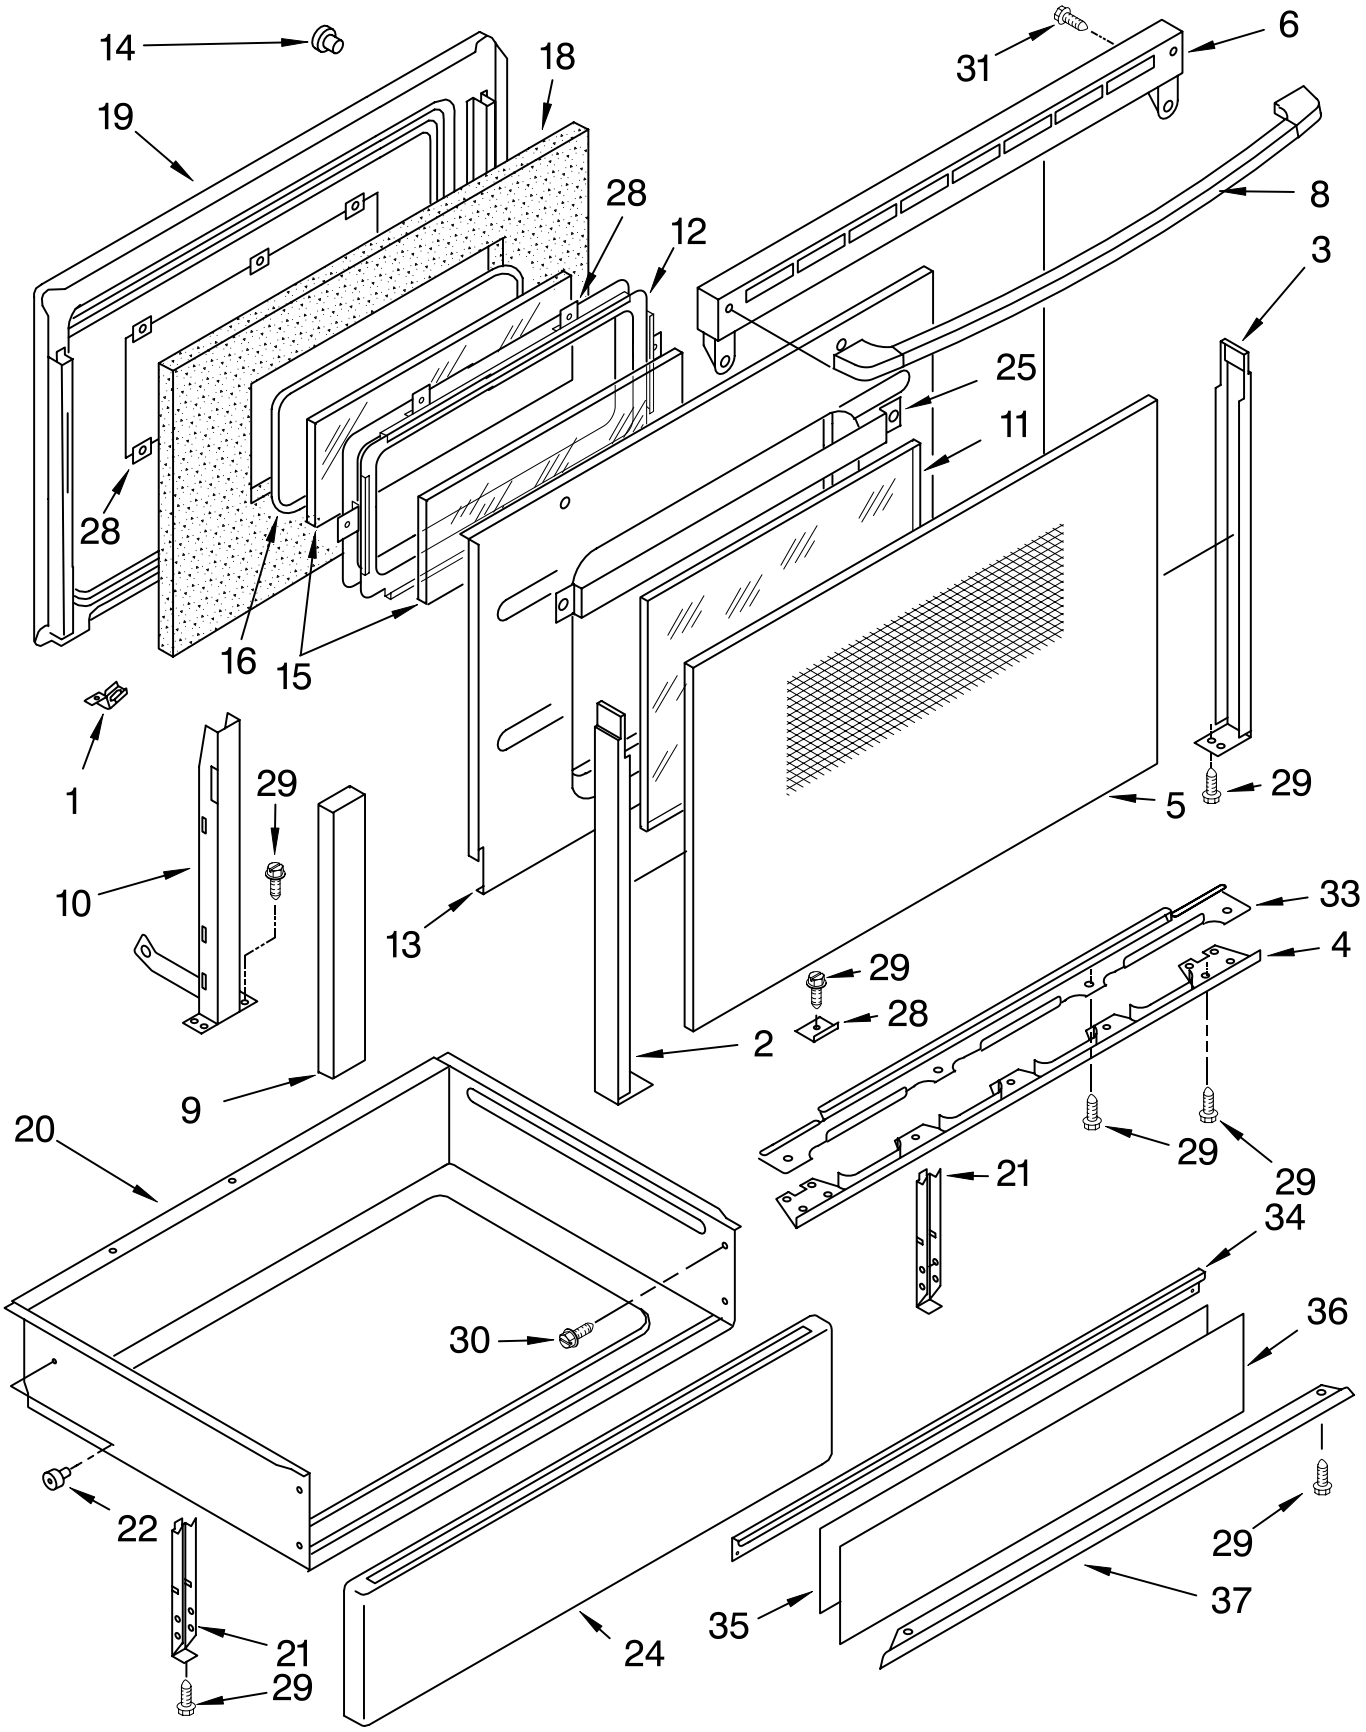

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9750676	Retainer, Glass
2		Trim, Door-Left
	9750631PW	White
	9750631PT	Almond
	9750631PB	Black
	9750631PC	Biscuit
3		Trim, Door-Right
	9750632PW	White
	9750632PT	Almond
	9750632PB	Black
	9750632PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PT	Almond
	9781209PB	Black
	9781209PC	Biscuit
5		Glass, Door
	9781627PW	White
	9781627PT	Almond
	9781627PB	Black
	9753378	Stainless
	9781627PC	Biscuit
6		Vent, Door
	9753498GW	White
	9753498GT	Almond
	9753498GB	Black
	9753498GC	Biscuit
	9781659	Gasket, Door Vent
	9781490	Seal, Door Vent Side
8		Handle, Door
	9780523PW	White
	9780523PT	Almond
	9780523PB	Black
	9780523PC	Biscuit
9	9781449	Gasket, Door Glass (4)
10	9750234	Hinge, Door R or L
11	9781592	Baffle, Glass
12	9781602	Frame,Glass
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass,Pyro
16	9781587	Seal, Glass
18	9754006	Insulation
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
	9750257	For BS Model
21	9750169	Bracket, Drawer
22	423713	Support, Roller
24		Front, Drawer
	9750168PW	White
	9750168PT	Almond
	9750168PB	Black
	9750569PB	BS Model
	9750168PC	Biscuit
25	9750693	Heat Channel
	90296	Clip
28	9781502	Spacer, Door (8)
29	9780265	Screw
30	9780272	Screw
31	9781072	Screw
33	9781771	Steam, Deflector
34	9750614PB	Trim, Drawer-Top
35	9753329	Spacer
36	9753293	Panel, Drawer (Stainless)
37	9750613PB	Trim, Drawer-Bot

OVEN CHASSIS PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

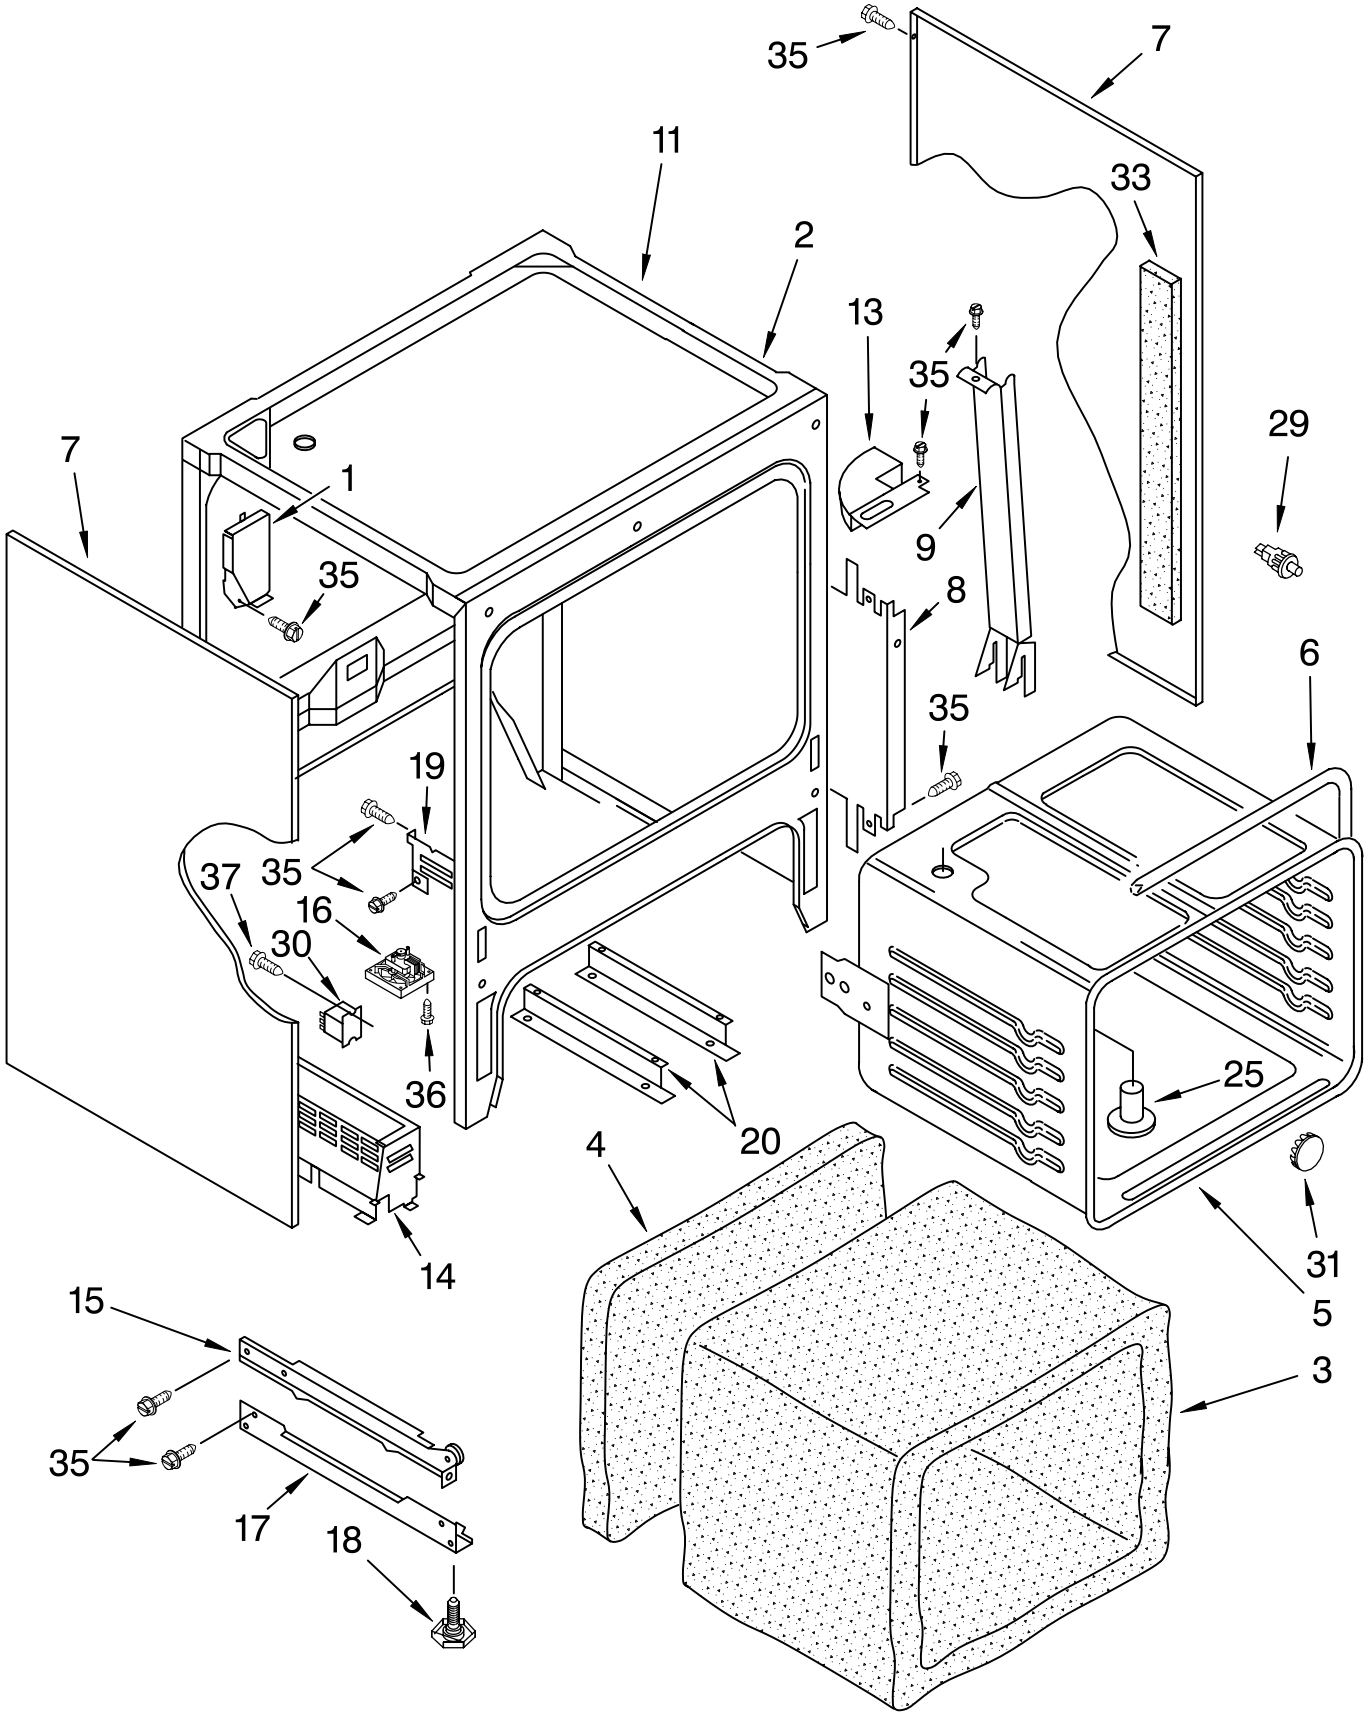

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	3191649	Gasket Oven
7		Side, Oven L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
9	9751789	Fan Duct, Side
11	9752637	Burner Box
13	9751653	Duct, Top
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9751020	Motor, Fan
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9750149	Hinge, Door L or R
20	9781904	Support Rail, Pan
25	9753091	Vent, Tube
29	9781581	Door Switch
30	9751948	Relay, Dlb.
31	9780578	Button, Plug
33	9754009	Insulation, Side
35	9780265	Screw
36	9751808	Screw
37	9781509	Screw

OVEN PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

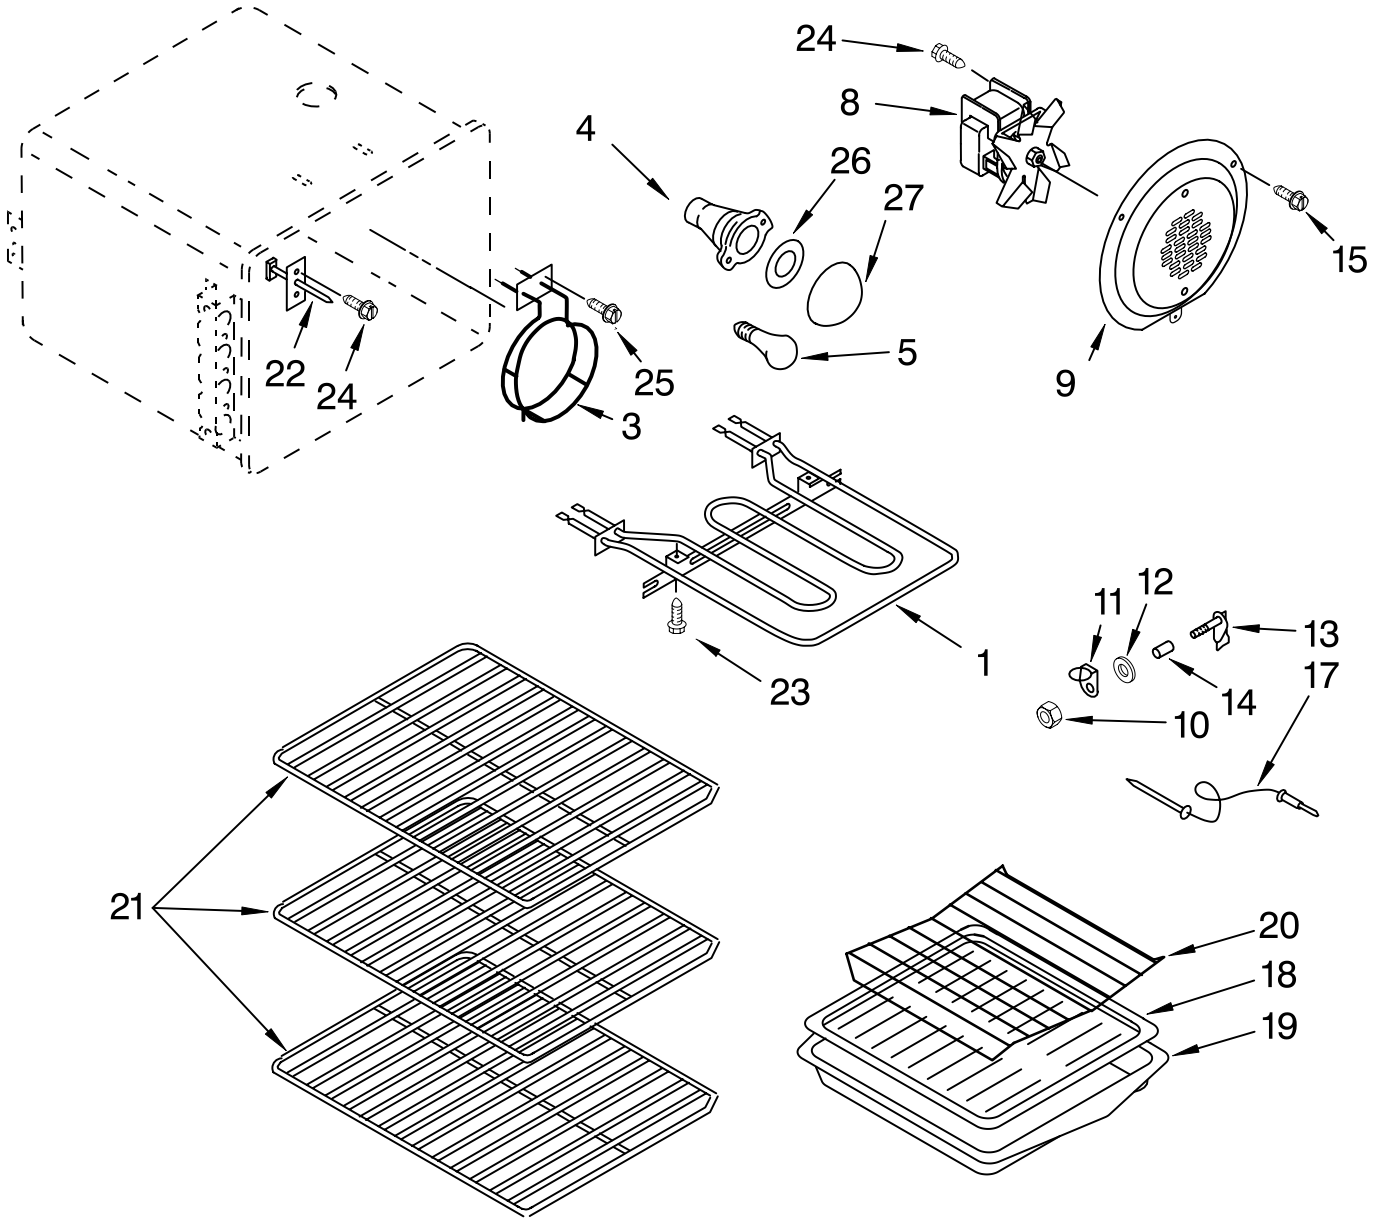

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781050	Socket, Light
5	8935	Bulb, Oven
8	9781543	Assembly, Fan
9	9751904GM	Baffle, Convection
10	4167277	Lock-Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
15	9781509	Screw
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	8053344	Sensor
23	340184	Screw
24	9780272	Screw
25	9780269	Screw
26	3184533	Gasket, Lens
27	9781049	Lens, Light

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

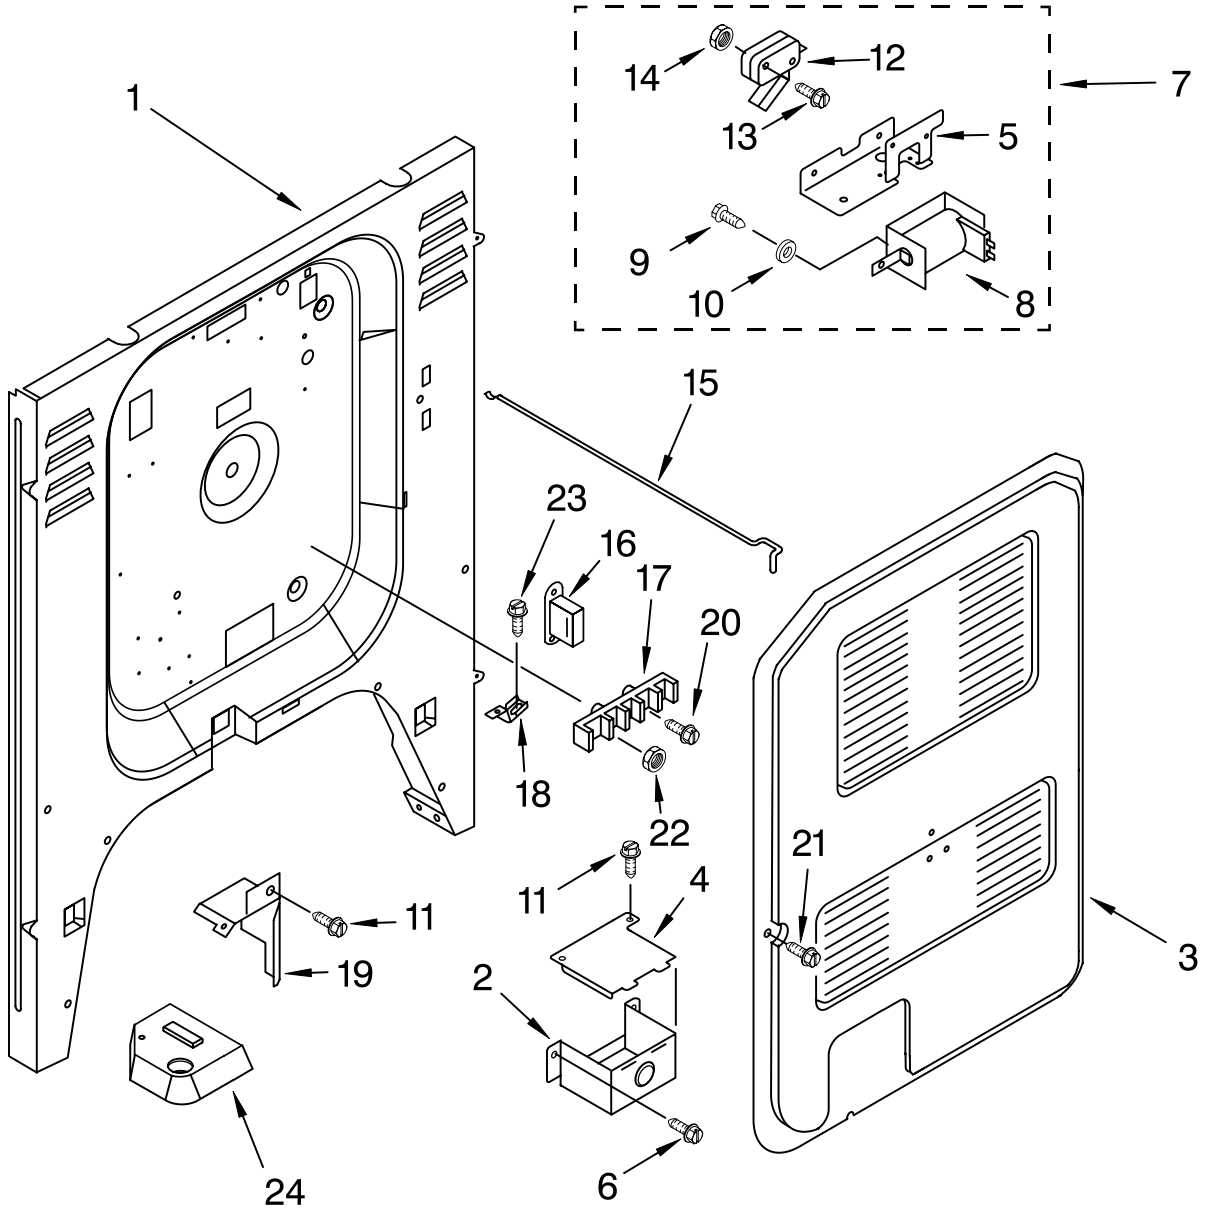

Illus. No.	Part No.	DESCRIPTION
1	9751051	Back panel,Chassis
2	9752344	Box, Terminal
3	9751353	Panel, Rear Cover
4	9752345	Cover, Terminal Box
5	9751418	Bracket, Lock
6	9780272	Screw
7	9751439	Oven Lock Assembly
8	9751590	Solenoid
9	422222	Screw
10	424238	Washer
11	9780265	Screw
12	9751763	Switch, Interloc
13	9750887	Screw
14	9750888	Nut
15	9750523	Rod, Lock
16	3191044	Ballast, Light
17	258076	Terminal Block
18	3169573	Ground Strap
	313660	Clip, (1)
19	9751798	Vent Back, Oven
20	98884	Screw
21	423247	Screw
22	112432	Nut
23	690989	Screw, Grounding
24	9753413	Block, Balance

CONTROL PANEL PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

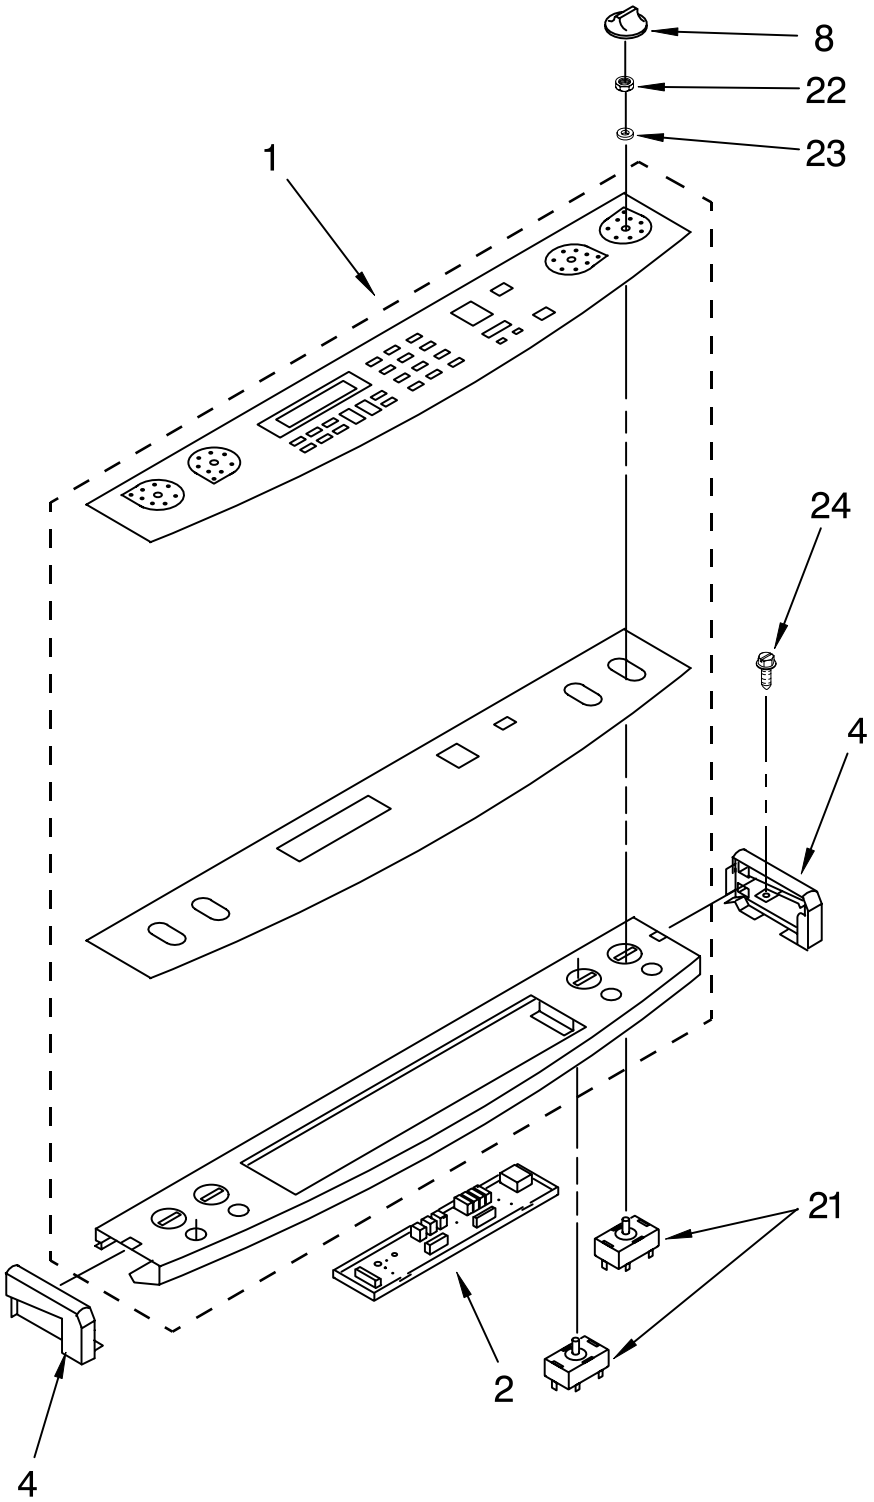

Illus. No.	Part No.	DESCRIPTION
1		Console, Glass
	9753898CW	White
	9753898CB	Black
	9753898CC	Biscuit
2	3191106	Timer, Electronic
	9780271	Screw, (2)
4		End Cap (Right Hand)
	9751280FW	White
	9751280FB	Black
	9751280FC	Biscuit (Left Hand)
	9751279FW	White
	9751279FB	Black
	9751279FC	Biscuit
	9781488	Spacer (2)
8		Knobs, Control
	9750372FW	White
	9750372FF	Black
	9750372FC	Biscuit
21		Switch, Infinite
	9751364	1500W - LR
	9751363	1800W - RF
	9751362	2200W - RR
	9751758	1000/2400W - LF
22		Nut, Mounting
	422617	Single Element
	9751711	Dual Element
23	9781455	Seal, Switch (4)
24	9780265	Screw

HIDDEN BAKE PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

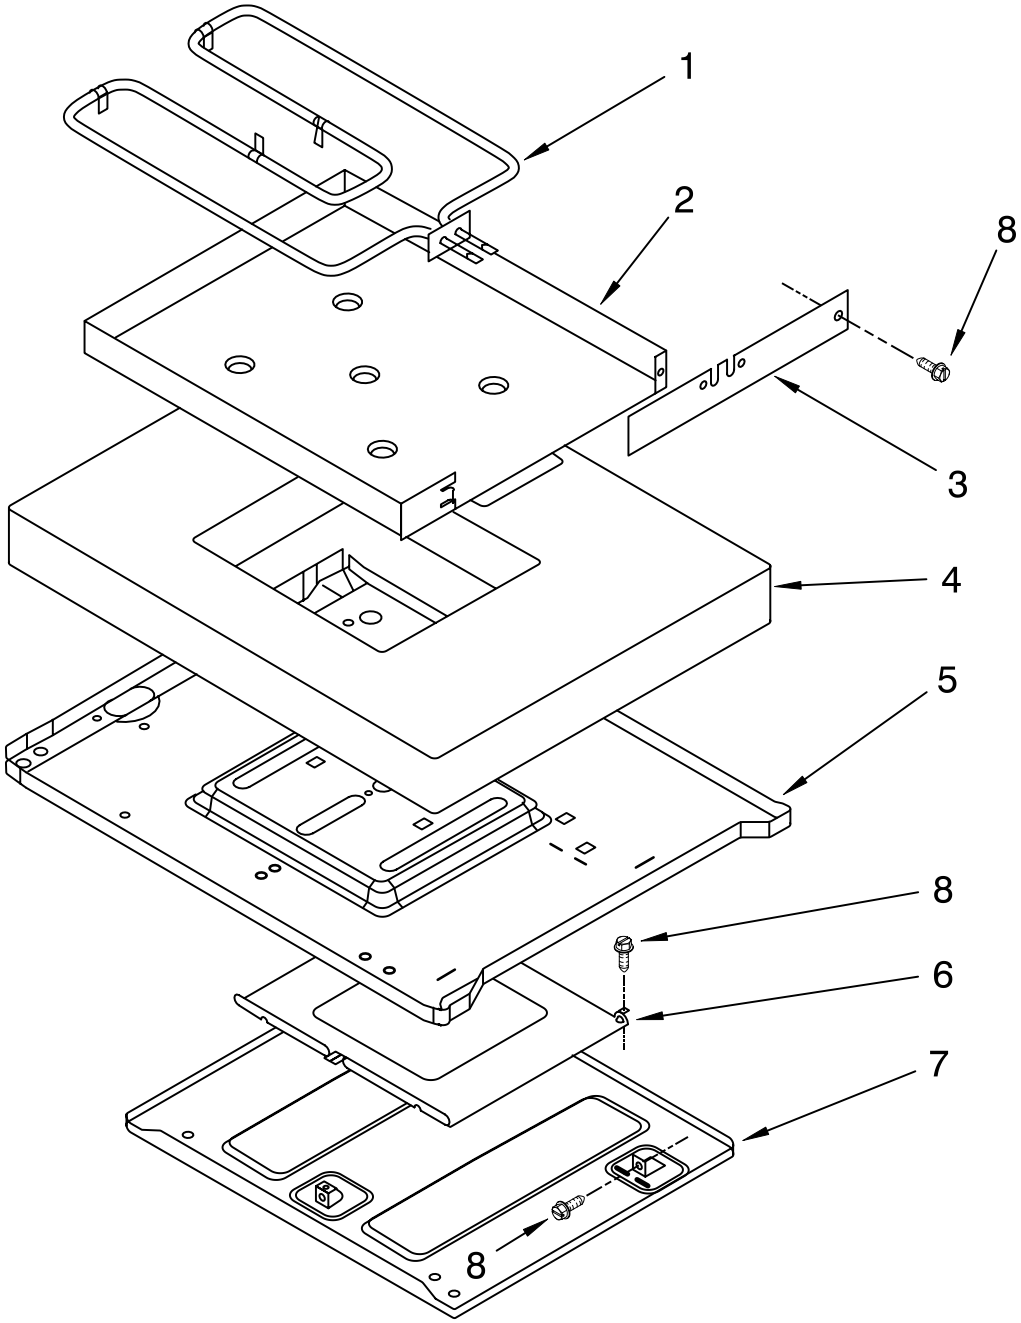

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9752228	Pan, Hidden Bake
3	9752250	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Retainer, Insulation
6	9751641	Plate, Reflector
7	9781025	Shield
8	9780265	Screw, 10-16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KERC607HWH1, KERC607HBL1, KERC607HBS1, KERC607HBT1
(White) (Black) (Black-Stainless) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
**511873	White Porcelain (2 Oz.)
4392899	Biscuit

** **Note:** Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
4392900	Biscuit (Uncut)

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean (1/2 Pt.)

INSULATION

9754003	Insulation, Wrap
9754011	Insulation, Rear

CLEANER, COOKTOP

9780196	Glass Cleaner

ANTI-TIP KIT

9751745	Anti-Tip Kit

WIRING HARNESS PARTS

9753944	Harness, Wire (Main Harness)
9781767	Harness, Wire (Control, Ceran)
9781769	Harness, Wire (Console)
9753943	Harness, Wire (Main Harness) (For BS Model)
9781932	Harness, Wire (Cooktop)
9750376	Harness, Wire (Oven Door)
9753374	Harness, Wire (Dual Oven Light)
9753683	Harness, Wire (Hidden Bake)
90016	Clip, Wire
9781656	L2 - Electric
9751868	Grommet, Harness
9751139	Harness, Wire (Meat Probe)
20082084	Tie, Wire
9751750	Harness, Wire (Top Light)
690989	Screw, Ground
3196520	Clip,Wire